

赤ちゃん医学から生まれた

Aprica


アップリカ ベビーカー plus
karoon
カルーン プラス

User Manual

Thank you for purchasing this Aprica product.

This product is a stroller suitable for one infant aged between 1 month and 36 months old with a weight of not more than 15 kg.

※ The definition of a 1 month-old infant, as mentioned above, is an infant whose gestational age was 37 weeks or above with the birth weight of 2.5 kg or above, and 1 month after birth.

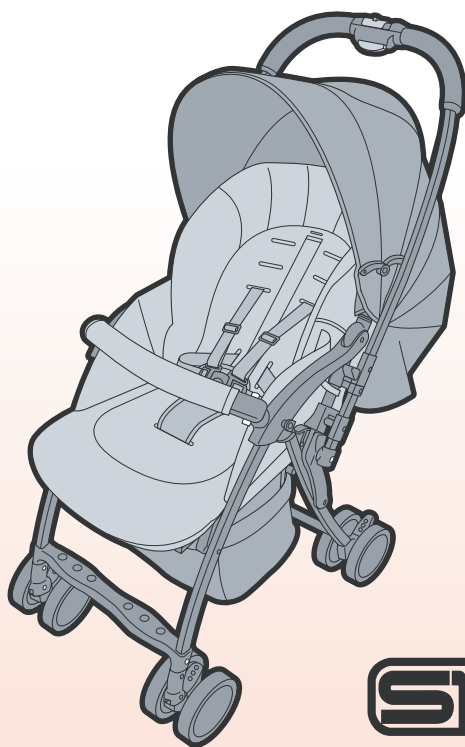

SG安全基準A形

Please read this manual carefully before using the product and use it accordingly.

Do not use the product in a way other than that mentioned in the user manual.

It will not only prevent the use of the product to its fullest potential, it can also be very dangerous.

After reviewing this manual, please keep it at hand for immediate reference whenever necessary.

Table of contents

Preface

Before use	1
Advice for guardians/ About SG standard/	
About symbols in this manual	
Precautionary statement	2 ~ 4
Warning/ Caution	
Removing the product	5
Product features	
Names of parts	6

How to use the stroller

How to open the stroller	7
How to switch over the handle	8
How to use the stopper	8
How to use the castors	9
How to attach infant pads	10
How to place the child.....	11
Adjustment of shoulder belt position.....	13
Adjustment of reclining angle	14
How to use the hood	15
How to use the foot support	16
How to use the basket	16
How to fold the stroller	17

How to remove fabric portions

How to remove canopy	18
How to remove the front guard cover	18
How to remove the basket	18
How to remove the seat	19
How to attach the seat	20

Miscellaneous

Daily maintenance	21
Troubleshooters	23
About storing	24
About disposal	24
After-sale service	24
Customer enquiry	25

Before use

Advise for guardians

Babies are not small-sized adults.

Infants who are unable to hold their heads up are especially vulnerable.

Please use the stroller carefully with a good understanding of babies.

- ① Pay good attention to the baby regularly and avoid using the stroller for long stretches of time.
- ② Avoid direct sunlight on the baby.
The temperature in the stroller rises higher than adults assume.
- ③ Avoid crowded places with a lot of loud noise or dust.
- ④ Try to push the stroller softly over uneven surfaces, and avoid roads that can shake or shock the baby.

About SG standard

- Strollers with SG logo meet the following standards set out according to the regulations of Consumer Product Safety Association. (This product has met the SG safety standard A-type.)

Scope of Application	This stroller is designed for regular family usage for single baby such as going out for a stroll or shopping.	
Classification of Type	A-type	Stroller for babies of at least 1 month* who lay in the stroller and are unable to hold the head up.
Scope of Usage	1 month to 36 months after birth	
Desirable Hours for Continuous Use	Laying position: up to 2 hours	Sitting position: up to 1 hour
Angle of Backrest	Over 150 degrees	
External Radius of Wheel	Over 115 mm	

* The definition of a 1 month-old infant, as mentioned above, is an infant whose gestational age was 37 weeks or above with the birth weight of 2.5 kg or above, and 1 month after birth.

About symbols in this manual

- The symbols of “**Warning**”, “**Caution**” and “**Don’t**” are differentiated according to the degree of risk and damage expected in event of non-compliance to the precautionary measures outlined and contain extremely crucial information. Please make sure to comply.

Symbol	Meaning
 Warning	Inappropriate usage may lead to death or serious injury.
 Caution	Inappropriate usage may lead to injury or property damage.

Don't Sign	Meaning
	Prohibit the particular handling of the product.

 Advice	Useful information for handling the product.
---	--

Precautionary statement

- In order to avoid unexpected accidents, please make sure to read the user manual before using the product and use it in an appropriate manner.



Warning

- Illustrates scenarios of mishandling that that may lead to death or serious injury.

May cause fall and injury of children.

Do not use without fastening shoulder belt, waist belt and crotch belt.



Do not let the child out of your sight. Even with the seat belt fastened, the child may stand up and over-turn or fall.



Do not let the child stand in the stroller.



May cause the stroller to run down the slope on its own, fall and injured the children.

Do not place the child in or remove the child from the stroller without locking the stoppers (both right and left).



Do not completely rely on stoppers when the child is in the stroller. Due to the conditions of road surface, structural functionality and durability of the stroller, it is not an item that can stop with absolute certainty.



Do not leave child in stroller even if the stoppers are locked up.



May cause the stroller to over-turn and the child may fall or be injured.

Do not place two children together or place the child anywhere other than on the seat.



May cause loss of balance or hinder view thereby leading to a fall.

Do not lift the stroller with the child inside by holding front guard or any other part of the stroller.





Warning

· Illustrates scenarios of mishandling that that may lead to death or serious injury.

May cause the stroller to overturn and cause child to fall and get injured.

Do not load baggage anywhere other than the basket, and do not hang things from the handle. Also, do not lean on the handle or apply too much load on the stroller.




Do not use the stroller on uneven surface such as stairs and escalators.




May cause the stroller to fold or the child to fall or get caught inside.

Before placing the child into the stroller, ensure the lock on both right and left sides are down completely.

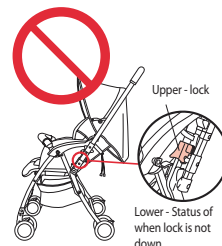

Use only when safety lock has been placed on.

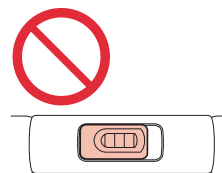

Belt may wrap around child's neck and cause suffocation.

Make sure to plug in the shoulder belt to the waist belt, and adjust the belt to the size of child.



Road surface condition may cause heat up and child may feel sick due to the high-heat in the stroller.

Do not use for long hours when the temperature is high and sunlight is strong.



Child's fingers or limb may get caught in the mobile parts of the stroller, or stroller may hit the child and cause injury.

Do not open the stroller near the child.



Watch child's finger and limb when switching over the handle.



**Warning**

• Illustrates scenarios of mishandling that may lead to death or serious injury.

Child's fingers or limb may get caught in the mobile or adjustable parts of the stroller, or stroller may hit the child and cause injury.

Watch child's finger and limb when setting up the front guard.



May damage stroller and cause injury to child or user.

Do not apply too much load onto the handle.



May damage stroller and cause accident or injury, or lead to unexpected accident.

- ◎ Do not allow disassembly, assembly or remodeling of the stroller by anyone other than the designated service providers from our company.
- ◎ Guardians should not lean on the stroller or sit on it.
- ◎ Do not use the stroller if it has received sudden force or impact by being dropped or thrown away.
- ◎ Do not use if any screw or bolt has been displaced.
- ◎ Do not use for carrying stuffs.
- ◎ Do not use as a child's toy.
- ◎ Do not use for any purpose other than carrying the child.

**Caution**

• Inappropriate usage may lead to injury or property damage.


- ◎ Make sure to exercise regular checkups and maintenance.
- ◎ Make sure the main body, hood and seat pad are placed properly before use.
- ◎ Lubricate movable parts periodically. Use only lubricant designed for plastic products.
- ◎ If the stroller is not used for a long time, make sure the checkup and maintenance are done before usage.
- ◎ User may cause unexpected accident or injury without reading the manual.
- ◎ When user is not familiar with how to use the stroller (such as grandparents), make sure they have been instructed on how to operate the stroller before use.
- ◎ Even if the stroller is empty, do not leave it in unsafe places such as on the slope or near roadway.
- ◎ Do not use if any screw or bolt of the stroller is loose.
- ◎ Do not connect two strollers together to use.
- ◎ Do not lift up the front wheel when pushing the stroller. It may cause a bend or break in rear frame.
- ◎ Do not let children operate the stroller.
- ◎ **Push with normal speed (about 4 km per hour) when carrying a child in the stroller.**
- ◎ Do not completely rely on stoppers. Depending on different road surface conditions and due to their structural functionality and durability, they are not as safe as automobile brakes.
- ◎ Do not use with crotch belt being attached to front guard. It may cause breakage of the crotch belt.
- ◎ Do not push the stroller in sandy places or in muddy water. Mobile or rotative parts may catch sand or dirt and prevent the stroller from opening or closing.
- ◎ Do not use when sands or mud is attached to the frames. Sliding parts may catch sand or dirt and prevent the stroller from opening or closing.
- ◎ To prevent over-turning of the stroller, when placing the child, the crotch belt should be placed between the child's thighs.
- ◎ **Do not mount such commercially available board to the main body of baby stroller for placing child on. It may cause damage.**
- ◎ The load of the basket is less than 5 kg.
- ◎ Do not hang baggage on the handle. It may cause damage.
- ◎ At railroad crossings, be careful to avoid getting the wheels stuck on the tracks.
- ◎ Do not use in a bus. This product is not designed for using in a bus. Using in a bus may cause over-turning or unexpected accidents in case of curves or sudden breaks.
- ◎ About usage in a train: This product is not designed for using in a train. When using in a train, exercising self-responsibility, make sure the stoppers are locked and use with enough caution in order to avoid over-turn in case of curve or sudden break.
- ◎ When using ontrain and such items, do not get on and off unnecessarily. Baby stroller may not be detected when being caught between train doors and this may cause injury.
- ◎ Do not use on accumulated snow or frozen road surfaces.
- ◎ Do not use when strong wind is blowing.
- ◎ Do not use during thunder.
- ◎ Do not use rain cover indoors or close to fire or high temperature. The temperature in the stroller may rise too high.
- ◎ Do not leave the stroller close to fire or in a heated car under burning sun. The plastic parts can become deformed and may not functions as well.
- ◎ When switching over the handle from "rear to front" or "front to rear," make sure the handle lock is securely hooked to the support pin.
- ◎ Do not take any action which may cause the stroller to breakdown.

Removing the product

Removing the product


- After taking out the product, ensure all parts are included without damage.
- In case any parts are missing or damaged, contact our customer support center or local distributor.
(See page 20)

Main body

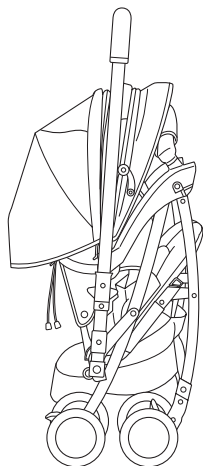

- Stroller is in folded position in sales package. Refer to page 7 to unfold the stroller.


Caster locks **A** are in engaged position in sales package.
Stoppers **B** are in engaged position in sales package.

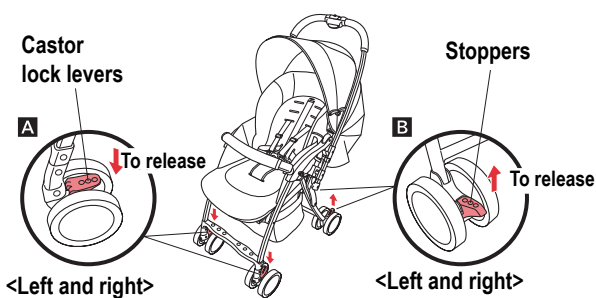



Caution

Release the lock before using the product. (See page 8, 9)

Accessory

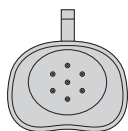

Head pad

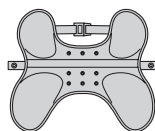

Body pad




User manual (this manual)


Product Characteristics

- Reversible handle for forward or rearward facing
- Single fold stroller frame
- Front and rear wheels equipped with suspension
- Double thermo equipped.
- Self standing in folded position
- Stroller frame is made of high grade aluminum

Names of parts

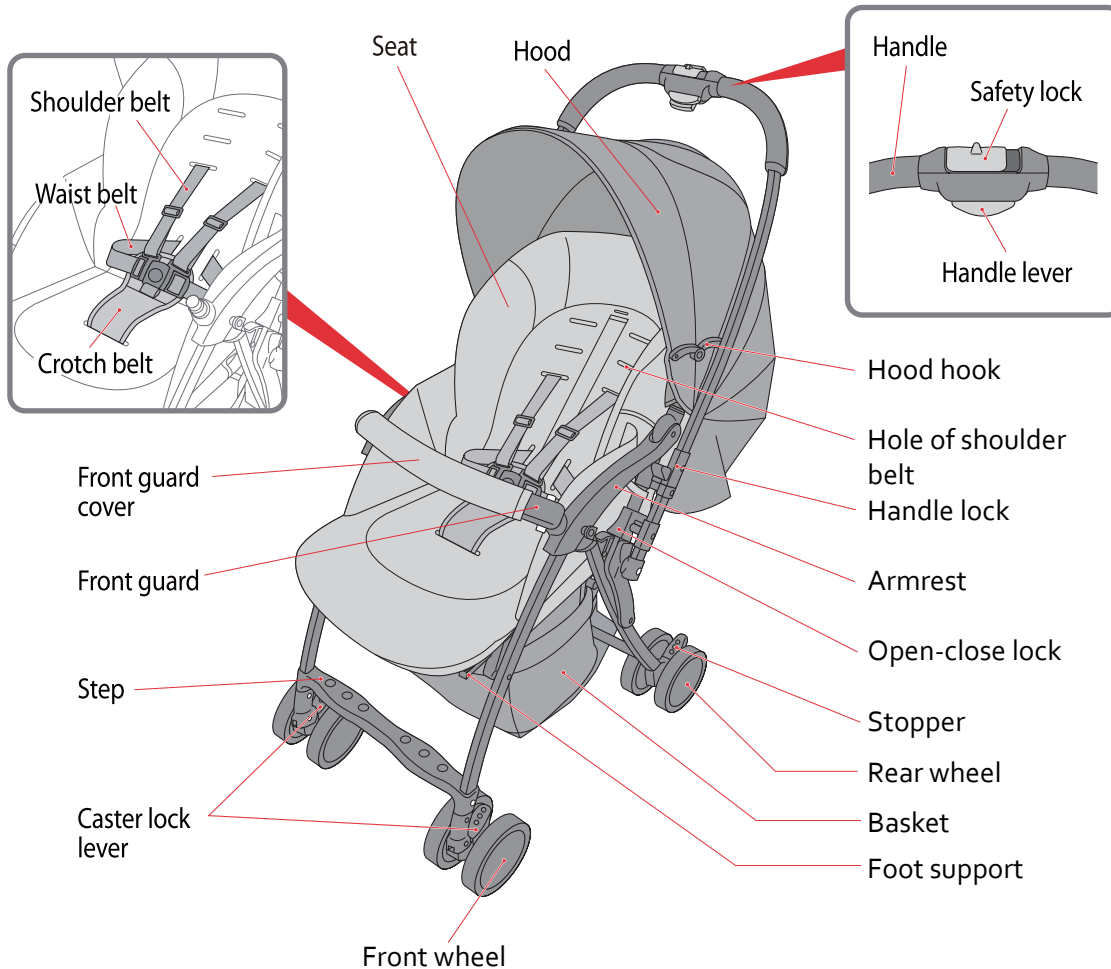

<Back side of backrest>

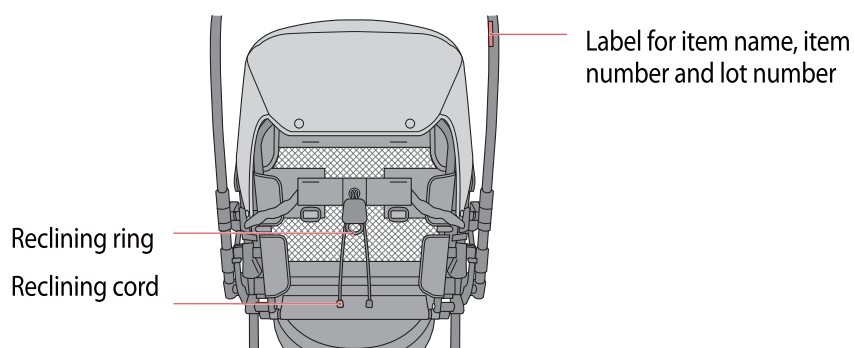

How to open the stroller



- Do not open or close when child is in contact with it.
Child's finger or limb may be caught in the movable parts, or stroller may hit child and cause injury.







- Do not let children operate the stroller.
It may cause over-turn or unexpected accident or injury.

Notes

- May not open and close smoothly at first as it has been kept in the package.
Please try continuously for a couple of times.

Red color displayed.

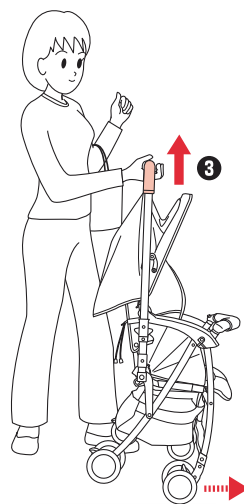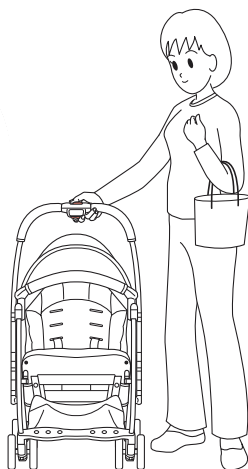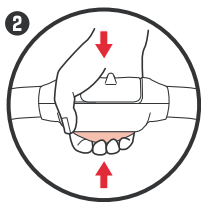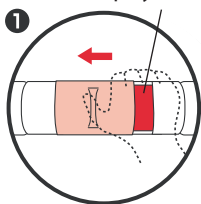


<Release the lock>

- 1 Slide the safety lock and (Red color displayed)
- 2 Hold the handle lever and push it to release the lock.


<Open>

- 3 While holding the handle, lift up the rear wheel until removed from the ground.

How to use the stroller

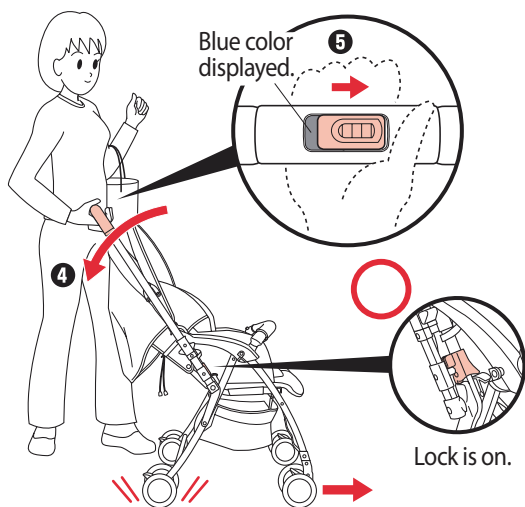


Blue color displayed.

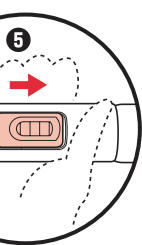

Lock is on.

Unlocked.

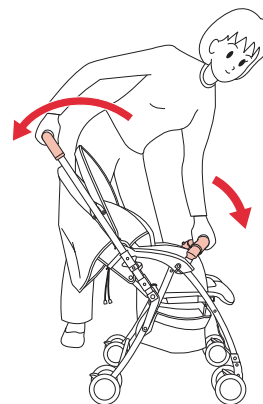

- 4 Pull the handle to open it.
- 5 Make sure to check that the safety lock is returned to the original position and the lock is on (Blue color displayed).



- When it is difficult to open with one hand, support with the other hand on the front guard to open.


How to switch over the handle



- Be careful to avoid finger or limb of child or user being caught in the movable parts, or baby stroller hitting and cause injury.
Improper handling or carelessness may cause unexpected accident or injury.
- When switching over the handle, be careful to avoid the child's hand or finger being caught.



- Do not switch over the handle when pushing the stroller or on the slope.
- Make sure to check that the handle is securely locked by trying to move the handle up and down before use.

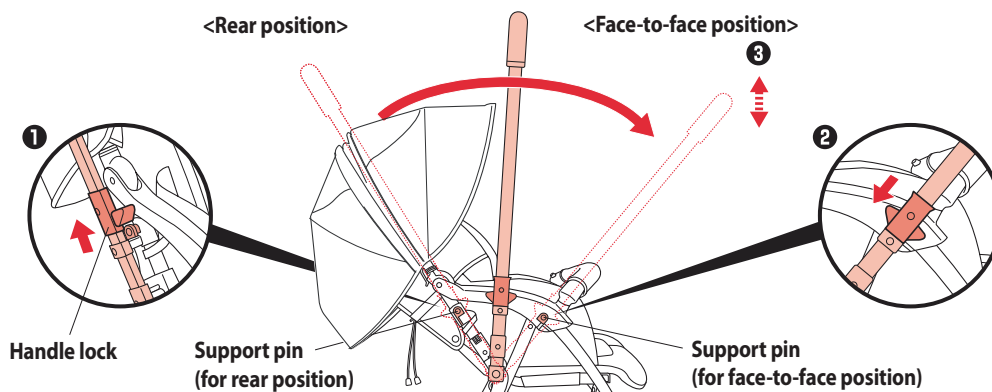

- 1 Switch the handle position while pulling up handle lock (right & left).
- 2 Hook the handle to support pin (right & left).
- 3 Try to move the handle up and down to check if it is locked.



- When the handle is in a face-to-face position, pushing stroller over the uneven surface may be difficult. In such case, place foot on the step and lift the front wheel or user may go up on the uneven surface first for overcoming the uneven surface.

How to use the stopper




- Do not completely rely on stoppers when the child is in the cart. Due to the conditions of road surface, structural functionality and durability of the stroller, it is not an item that can stop with absolute certainty.
- Do not leave the child in the stroller even if the stoppers are locked.




- Even if the stroller is empty, lock the stoppers when leaving the stroller.

<Lock>

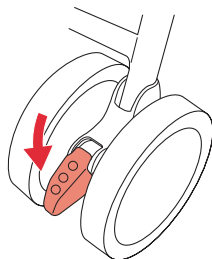

<Unlock>

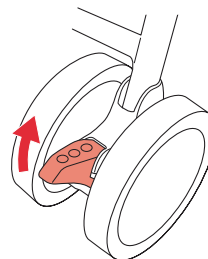


How to use casters

<When using casters>



Warning

- When pushing stroller on uneven surfaces, hills or slopes, lock both right and left casters. Depending on the direction of casters, the wheel may not turn properly and cause the baby stroller to over-turn or the child to fall and get injured.

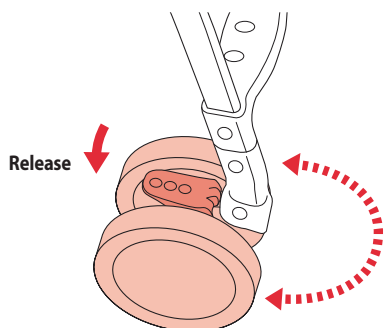

- Push down the caster lock levers (right & left) and release the lock.



Advice

- As the new shock-absorbing structure being adopted, front caster's elasticity may seem too strong, but it is not a malfunction.
- When pushing stroller on flat surface, changing traveling direction is smoother by using casters as the front wheel direction changes accordingly. Use stroller with casters unlocked under normal conditions.

<When not using casters>




Caution


- Caster locking directions for rear position and face-to-face position are different. Caster lock lever should be locked in the way facing to the user. If using the stroller with wrong locking direction, it may cause damage.

- Push up the caster lock levers (right and left) to lock.

<Rear position>

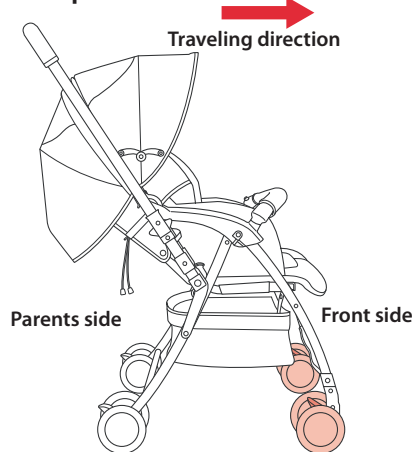

<Face-to-face position>

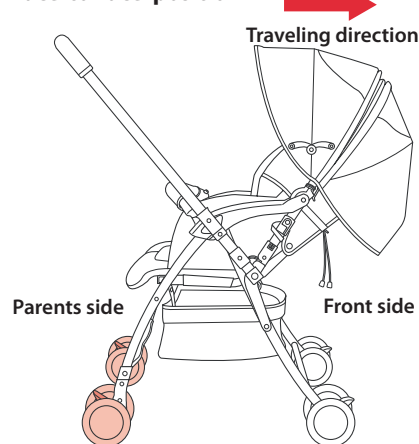


Advice

- As the new shock-absorbing structure being adopted, front caster's elasticity may seem too strong, but it is not malfunctioning.
- When casters are locked, the front wheel direction is secured, which makes pushing the stroller easier when going on uneven surface, slope or hilly land.

How to attach infant pads

- Infant pads head to secure child in the correct position.

Head pad (to be used from birth to around 7 months)

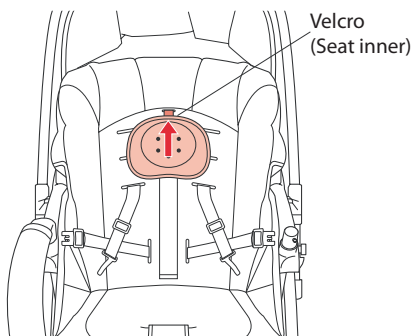


- Pull the velcro on the back of head pad in the indicated direction through the opening on the seat pad to the inner side and secure the velcro.



- For easier attachment, detach the seat top first and flip it over the front. (See page 19 for details)


<About placement of head pad>

- Recline the seat pad to the lowest angle and set shoulder belt to the lowest position when applying the head pad.
- Do not use head pad when shoulder belt is set the the middle and upper position.

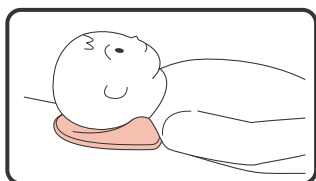

- The protruded section should be placed right behind child's neck.
- Remove the head pad if it does not fit anymore.

Body pad (to be used from 1 month up to around 3 years)

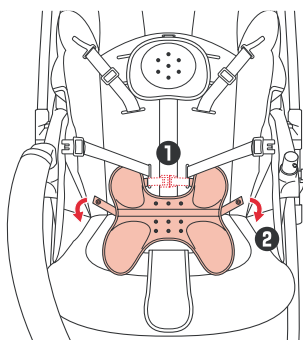


- ① Route the upper belt buckle through the waist belt holes to the back of seat and fasten the buckle.
 - ② Snap the left and right snaps onto the seat. (left and right)
- Some child may become too big to use the body pad even before 3 years old. In such case remove the body pad to use.

How to place the child



- Be careful to avoid finger or limb of child or user being caught in the movable parts, or stroller hitting and causing injury.
Improper handling or carelessness may cause unexpected accident or injury.


1 Preparation

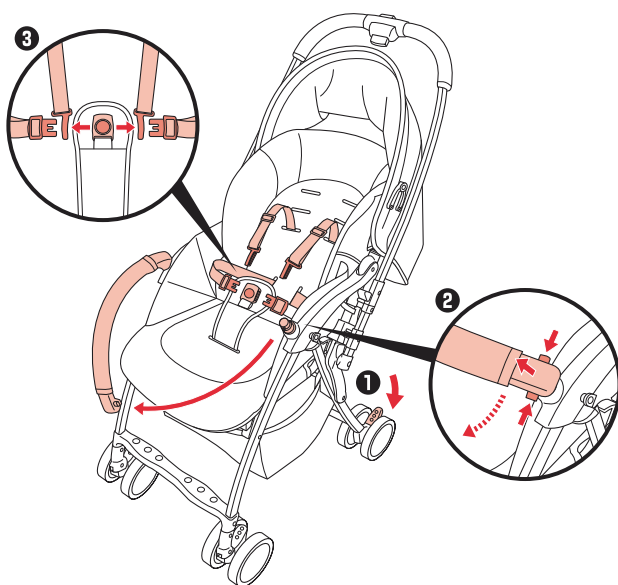

- 1 Lock the stoppers (right and left).
 - 2 Open the front guard.
 - Push the inside and outside lock button to open.
 - 3 Release the shoulder and waist belts.
 - Push the crotch belt buckle to release waist belt and shoulder belt.
- For changing reclining angle, see "Adjustment of reclining angle" on page 13.
 - For using foot support, see "How to use foot support" on page 14.

2 Placing the Child

(Place child and fasten shoulder and waist belts.)

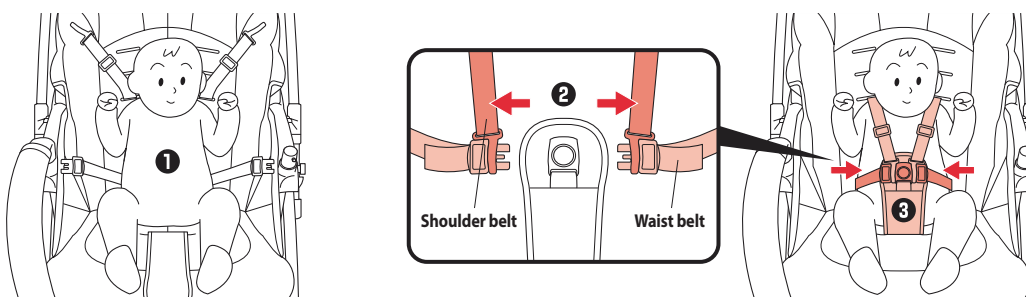

- 1 Place child in the baby stroller.
- 2 Insert the shoulder belt into the waist belt.
- 3 Insert the waist belt into the buckle of the crotch belt.

- For changing the shoulder belt position, see "Adjustment of shoulder belt position" on page 12.



- Do not leave the shoulder belt unused. Make sure to plug in the shoulder belt to waist belt when using the stroller.
The shoulder belt can wrap around the child's neck.

How to place the Child (Continued)



- When the shoulder and waist belts are not fastened securely, it may lead to the child standing up and over-turning or falling down. Shoulder and waist belts should be adjusted according to the growth of the child.
- Be careful not to catch the child's finger when closing the front guard.




- Keep at least 3 cm long fringe (the portion with  sign) at the end of the shoulder belt.
- Waist buckle cannot be removed.
- When adjusting the reclining angle, make sure to readjust the shoulder belt.
- When closing the front guard, make sure it is locked securely.


3 Adjustment of belts

<Adjustment of waist belt>

<To loosen up>

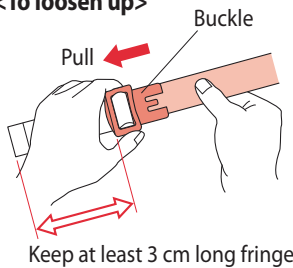

<To tighten up>

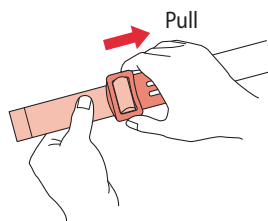


- Pull the waist buckle to adjust the length.




- It is ideal to fasten to the degree that an adult can insert four fingers between the fastened belt and the child.

<Adjustment of shoulder belt>

<To loosen up>

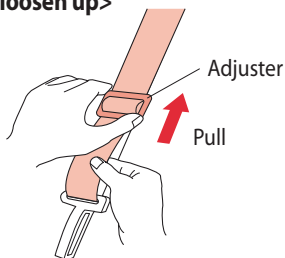

<To tighten up>

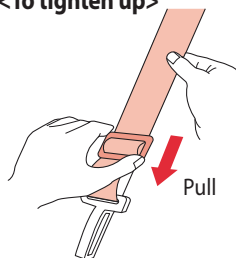


- Pull the adjuster to waist buckle to adjust the length.



- The shoulder belt should be fastened securely to the degree that an adult can insert one finger between the belt and the child.

4 Lastly

<Close the front guard>

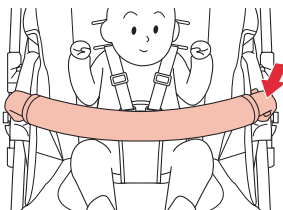


Plug in



- Make sure it is securely locked.

<Release the stoppers>

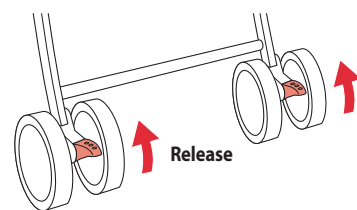

Adjustment of shoulder belt position

Warning

After attaching the shoulder belt to the seat, make sure it is securely attached by pulling it from the front position of the stroller.


Caution

Shoulder and waist belts should be adjusted according to the growth of the child.

When taking out the product from the package, the belt is set at the lower level.

<Shoulder belt position>

Shoulder belt could be adjusted to 3 different positions.

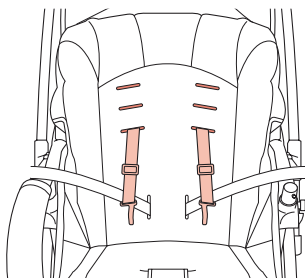



Upper level
Middle level
Lower level

Reference of age in month (size)	Position of shoulder belt
18 months to 36 months	Upper level
7 months to 18 months	Middle level
1 month to 7 months	Lower level

Advice

Make sure the shoulder belt is not twisted.

How to use the stroller

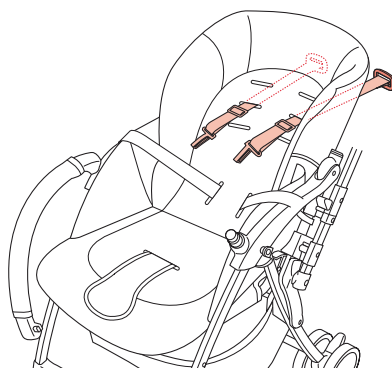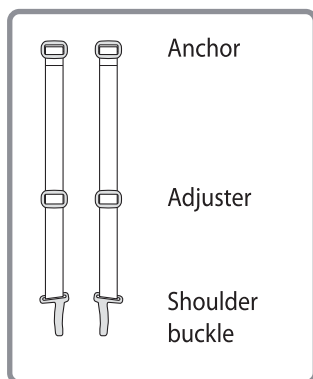


Insert the anchors.

When adjusting the position of the shoulder belt, flatten the angle of the anchors (right and left) to pull and insert through the shoulder belt holes on the backrest and seat.


<When using upper position>

Insert through the seat hole (upper position) and base hole (upper position).

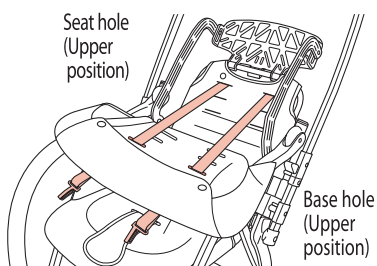


<When using middle position>

Insert through the seat hole (middle position) and base hole (middle position).

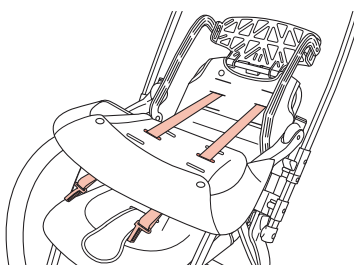

<When using lower position>

Insert through the seat hole (lower position) and base hole (lower position).

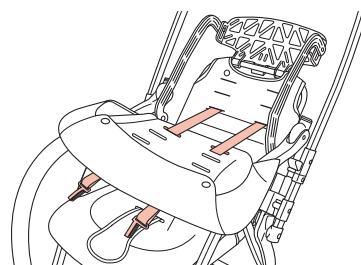

Adjustment of reclining angle



- When pushing down the backrest with child in the stroller, release the shoulder belt first.
- After adjusting the reclining angle, readjust the shoulder and waist belts.



- Do not adjust the reclining angle while pushing the stroller.
- When adjusting the reclining angle with child in the stroller, be careful to avoid abrupt changes.
- When pushing down the backrest with child in the stroller, support the weight of the child.
- Use the stroller with the flattened backrest for children who are not yet able to sit up.


<Reference for reclining positions>

Reference of age in month (size)	Reclining position
1 month to when the head is held up securely	Fully down and flat position
After the head is held up securely to when able to sit alone	Fully down and flat position to middle position
After able to sit alone	Fully down and flat position to full up-right position




- If the space is too tight when the backrest is fully down to a flat position, the backrest can be lifted up to middle position subject to the child being able to sit alone.

To push down the backrest

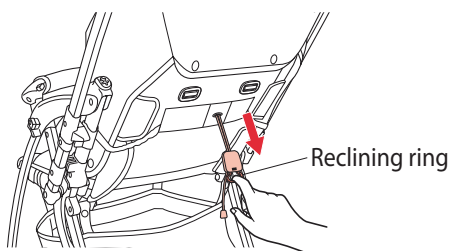

- 1 Hold the child with one hand and pull the reclining ring.

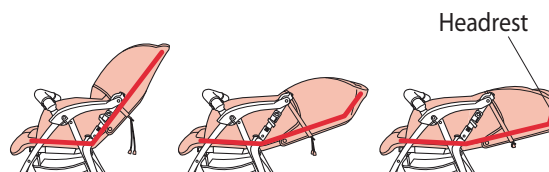


- 2 Adjust to proper angle while pulling the ring and pushing down the backrest.



- If the child is able to sit alone and the head is at the headrest position, when the backrest is pushed down, the child's position will become improper. Raise the backrest to a position where the headrest does not rise.

How to use the stroller

To push up the backrest

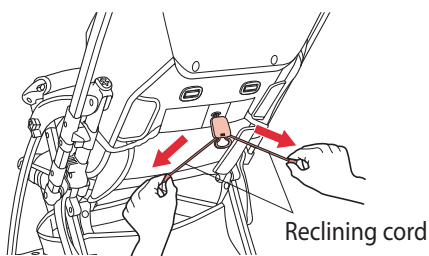

- When child's weight is not applied to the backrest, pull the ends of the reclining cord to both right and left.




- When child's weight is applied to the backrest, it cannot be raised.

How to use the hood




- When opening and closing the hood, pay attention to the child's fingers and hands. It may catch the finger or hand.

How to open

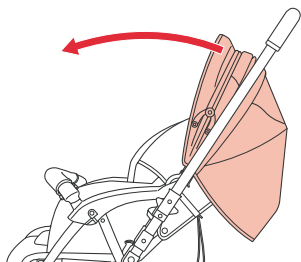


① Open the hood towards the front.

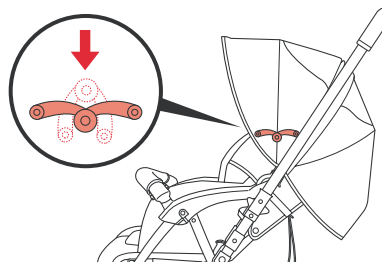


② Lock the hood hooks (right and left).

How to fold

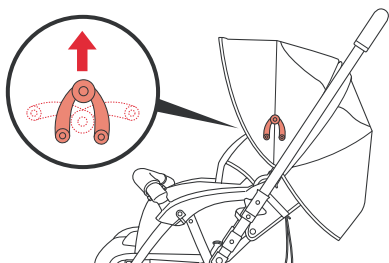


① Release the hood hooks. (right and left)

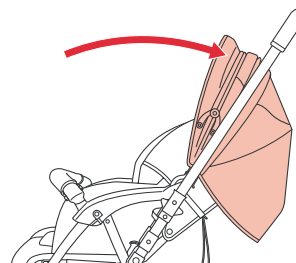


② Fold the hood to the back.

<To adjust hood angle>

- You may adjust the angle of hood to match with seat angle or other needs.

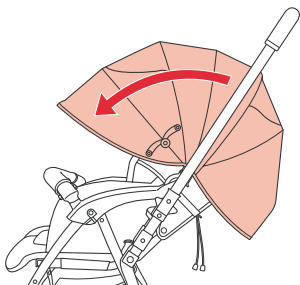


① Open the hood and then pull it to the front to a desired angle.

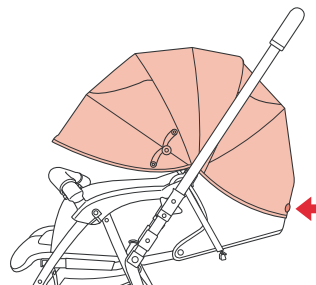


② When seat is in reclined position, fasten the rear hood snaps onto the backrest. (right and left)

<To open the hood window covers>

- You may view your child any time through the front and rear hood windows.

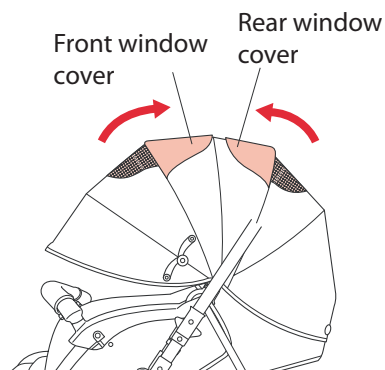

How to use the foot support

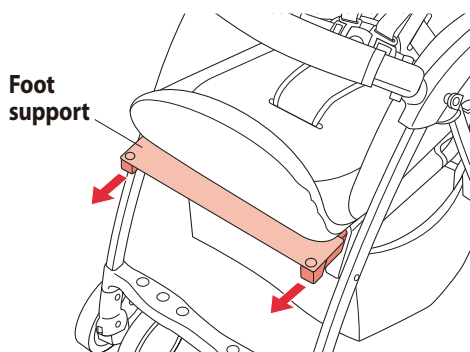


- Foot support can help the child to feel comfortable when sleeping.
- Lift up the seat and pull out the foot support (right and left).

How to use the basket



Caution

- Do not place incise items in the basket. It may damage the basket.
- Do not place more than 5 kg worth of items in the basket.

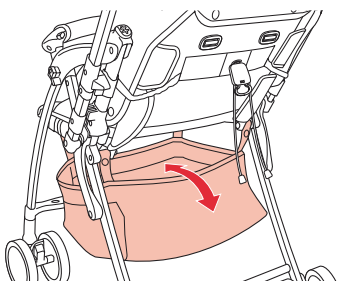

- Place and remove items from the upper side of the basket.



- Place items in the way that weight is spread evenly at the bottom of the basket.

How to fold the stroller






- Do not open or close the stroller when the child is in contact with it. The child's finger or limb may get caught in a movable part, or the stroller may hit child and cause injury.
- Do not let children operate the stroller.



- Fasten the shoulder and waist belts to the buckle first before folding.

Tips




- If it is being packed away previously, the stroller may not open and close smoothly initially. Please try continuously a couple of times.

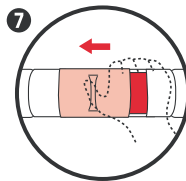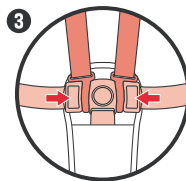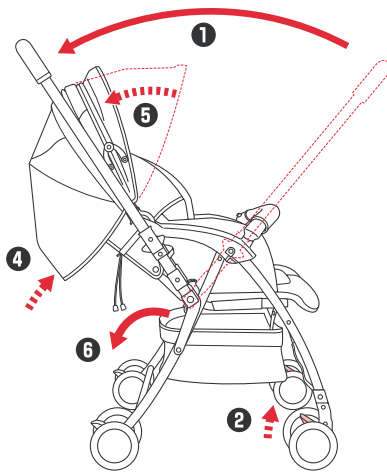



<Before folding>

- 1 Switch handle to the front facing position. (See page 8)
- 2 Lock the castors. (See page 9)
- 3 Fasten the shoulder and waist belt into the buckle. (See page 11)
- 4 Lift the backrest of seat. (See page 14)
- 5 Fold the hood. (See page 15)
- 6 Remove goods from basket.
- 7 Release safety lock.

How to use the stroller

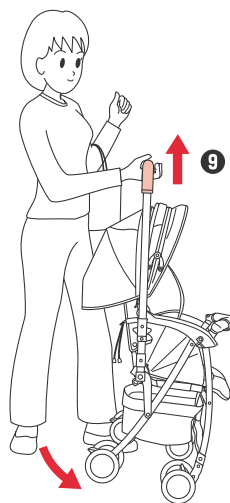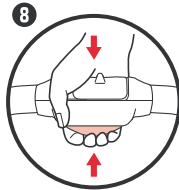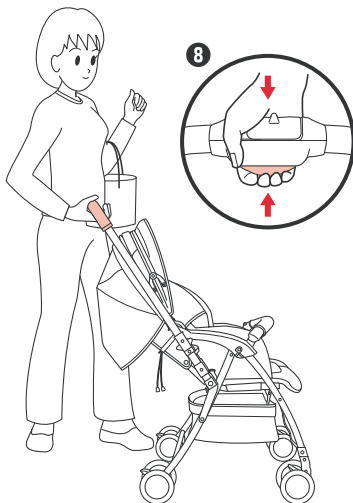

9

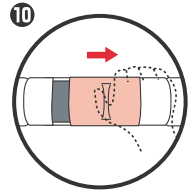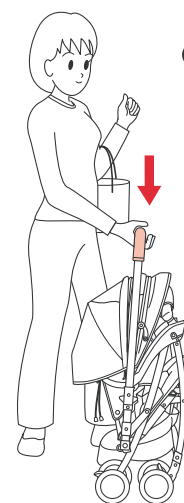

<Release the lock>

- 8 Squeeze the handle lever to release the lock.


<Fold the stroller>

- 9 Squeeze and lift the handle once and then down when stroller starts to fold.
- 10 Engage the safety lock.




- When it is difficult to open with one hand, support with the other hand on the front guard.

How to remove the hood

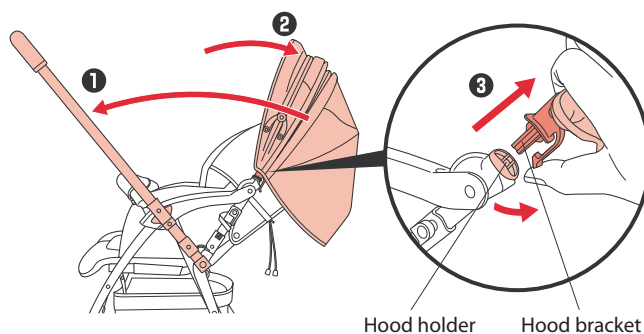


- ❶ Switch over the handle to the face-to-face position. (See page 8)
- ❷ Fold the hood. (See page 15)
- ❸ Push the tab of the hood bracket and pull out the bracket from the hood holder (right and left).

How to remove the front guard cover

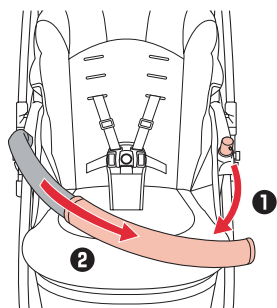

- ❶ Open the front guard.
- ❷ Take out the front guard cover.

How to remove the basket

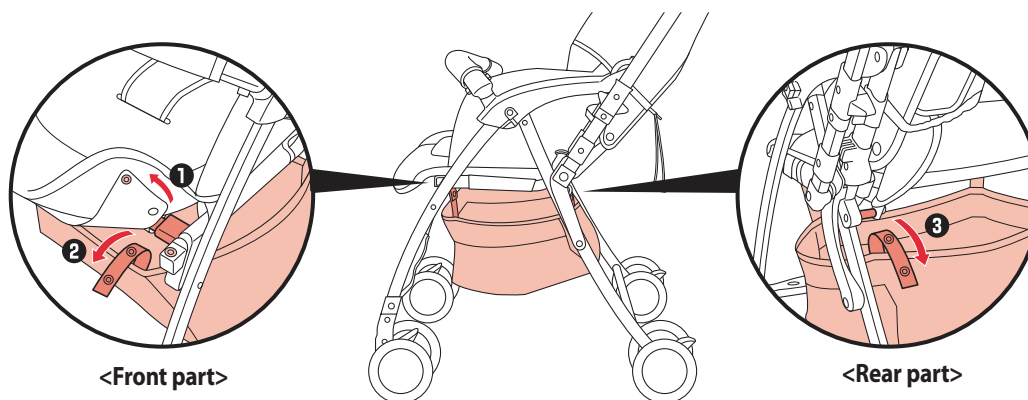

- ❶ Hook off the foot support hooks (right and left).
- ❷ Hook off the front part hooks (right and left).
- ❸ Hook off the rear part hooks (right and left).




• Do not remove the basket when items are inside.


How to remove fabric portions

How to remove the seat

- Remove hood and basket first. (See page 18)

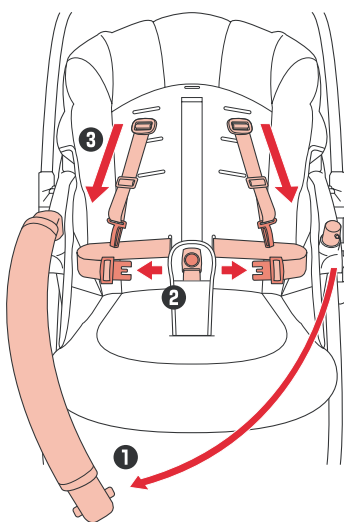


- 1 Remove the front guard.
- 2 Press the buckle button and remove the shoulder and waist belts.
- 3 Take out the shoulder belt.

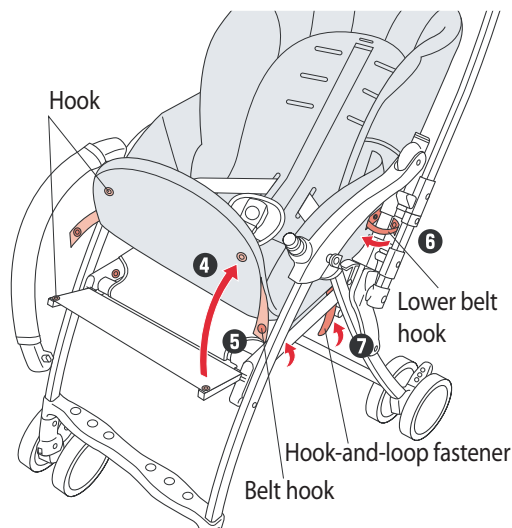


- 4 Remove the hooks (two) at the rear of seating portion.
- 5 Remove the belt hooks (two) at the rear of seating portion.
- 6 Remove the lower belt hooks (two) at both sides of the seat.
- 7 Remove the hook-and-loop fasteners (two) at the rear of the seat.

Upper belt hooks

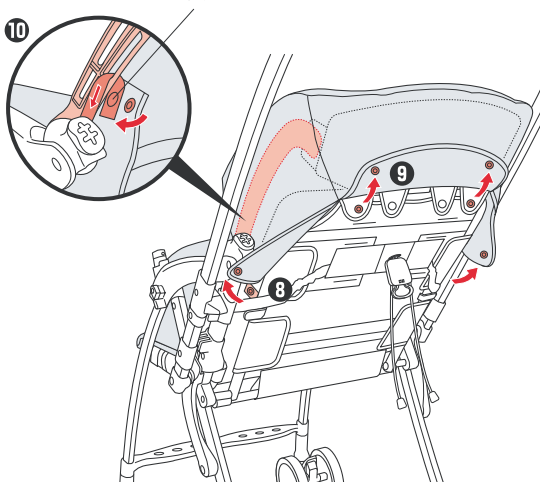


- 8 Remove the hooks (two) at both sides of the seat.
- 9 Remove the upper belt hooks (two) and pull out.
- 10 Remove the hooks (two) in rear of backrest.

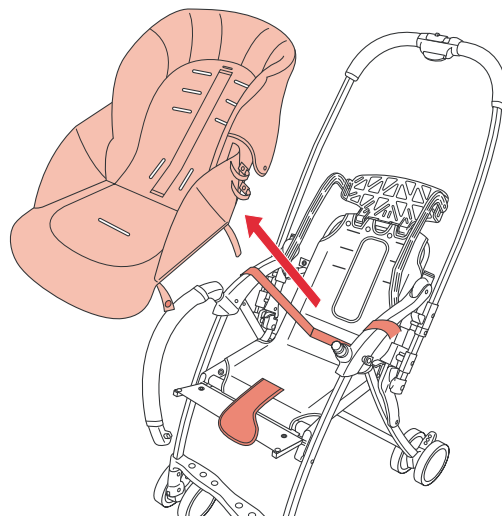


- 11 Take out the crotch belt and waist belt, and remove the seat.


How to attach the seat

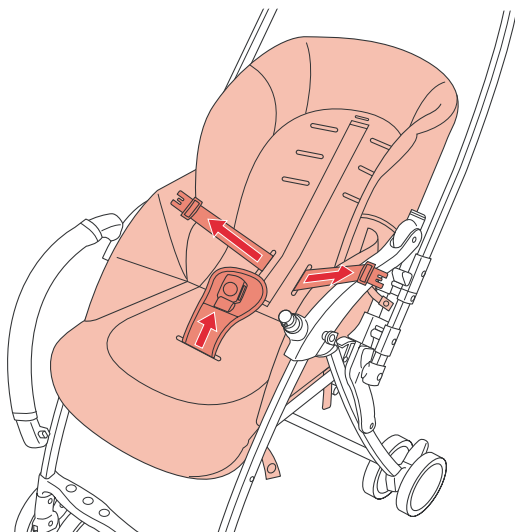


- ❶ Place the seat onto the frame and pull the crotch belt and waist belt to the front through the holes.

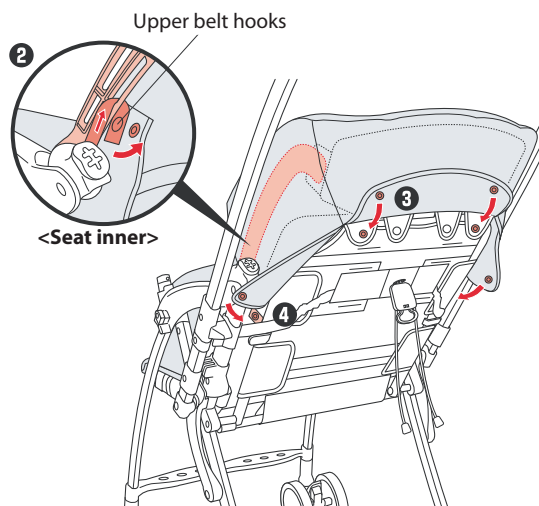

- ❷ Route the upper belt hooks (two) and fasten them.
- ❸ Fasten the hooks (two) at the back of seat.
- ❹ Fasten the hooks (two) at the side of seat.

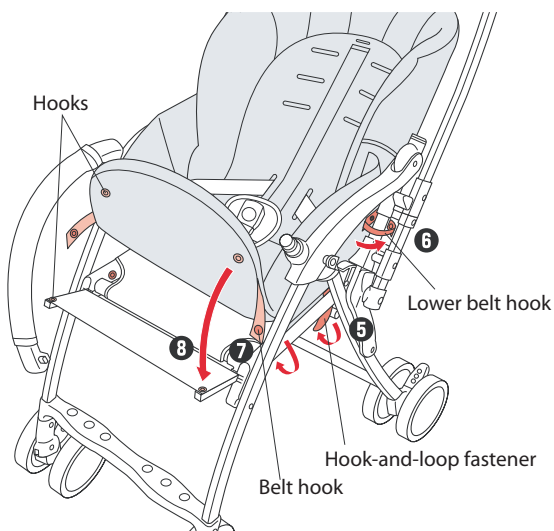

- ❺ Fasten the hook-and-loop fasteners (two) at the rear of the seat.
- ❻ Fasten the lower belt hooks (two) at both side of the seat.
- ❼ Fasten the belt hooks (two) underneath the seat.
- ❽ Fasten the hooks (two) underneath the seat front. (When foot support is in use)

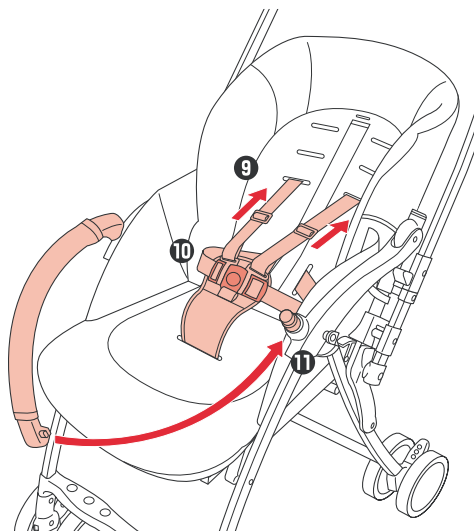

- ❾ Attach shoulder belt. (See page 13 step 1 and 2)
- ❿ Fasten shoulder and waist belt into buckle.
- ⓫ Attach front guard.

Daily maintenance

Washing of softgoods

<Washing of seat pad, front guard cover, shoulder pad, crotch belt cover, head pad and body pad and reversible seat>

- Pay attention to the below when washing the parts.



CAUTION

? After washing, lay all softgoods on a flat and shade surface for cool dry.

<Washing of canopy, waist belt, basket and shoulder strap>

Follow the below directions to clean the corresponding parts.

- For soluble stains (juice, saliva, urine etc), use a piece of damp cloth soaked into warm water of around 40C to wipe the stains off. Afterwards, use a piece of dry cloth of wipe the water off and then let the part cool dry.
- For water insoluble stains (milk, oil, mayonnaise etc), dilute some neutral detergent into warm water of around 40C, and then use a piece of spongy or brush to clean the stains with the diluted detergent. Afterwards, use cold water or warm water to wash away the detergent. Use a piece of dry cloth to wipe the water off and let the part cool dry.



CAUTION

- Stop using the stroller immediately and consult the store of purchase of distributor in case and damage or rift is found on softgoods.

Daily maintenance

Maintenance of stroller body

<About frame and wheels>

- Use a piece of damp cloth to wipe mud and sand off the frame whenever it gets dirty.



CAUTION

- Do not use stroller when there is sand or mud left on frame. (It may become cause of malfunctioning.)
- Do not use thinner or alcoholic cleansing agent when cleaning stroller frame.

- Wheels are consumable parts. When thickness of tire is getting less to around 5mm, consult store of purchase for replacement parts. (Charges may be incurred.)

<About screws and rivets>

- Check screws and rivets on regular basis to ensure they are not loose or missing.


<About front guard>

- Use a piece of damp cloth etc to wipe stains or dirt off the front guard, particularly the conjunction area.

<To add lubricant>

- Add lubricant on a regular basis at moving parts. Apply lubricant applicable to plastic components.
- Before adding lubricant, make sure to clean the stroller and wipe off water first.
- Add only 1~3 drops every time to places required.

- Add lubricant to the indicated parts whenever a stroller is found difficult to fold/unfold, or when the swivels are not rotating smoothly, or when strange noises are found from body or wheels during strolling.

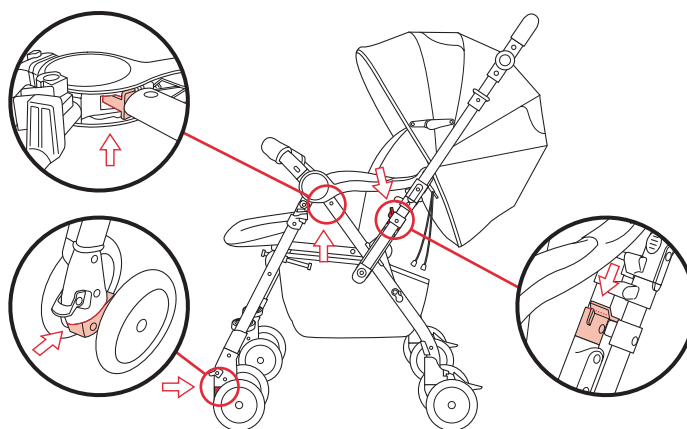


CAUTION

- Do not add lubricant to the conjunction area of the front guard and the armrest.
Front guard may become easily detached and cause danger to child.



Conjunction area of front guard

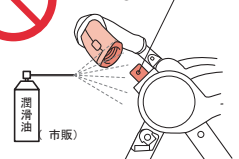

Troubleshooters

- When troubles cannot be resolved, contact our customer support center. (See page 21)

<Troubles in use>

Problem	Solution
Front casters do not turn	Release the lock of both right and left casters. (See page 9)
Front casters do not turn smoothly	Apply lubricant to casters. (See page 18)
Stoppers do not work	Check stoppers to see if any item, such as pebble, is stuck inside.
Reclining function does not work	Remove child from the stroller and pull the reclining cord. (See page 13)
Shoulder belt cannot plug in to waist belt	Check if any fabric or seat belt is caught.
Stroller cannot be folded	Before holding, release the lock. (See page 15) Check if seat belt is caught in the lock.
Worn out tires	When the thickness of the tire has reduced to about 5 mm, it should be replaced. Contact our customer support center. (See page 21)

<For Reuse>

Problem	Solution
Do not know how the previous user handled the stroller.	Using the product without knowledge of previous use is not recommended.
Crack or obvious scratch in the stroller.	It cannot be used.

About storing

- Put the stroller in a plastic bag and store in a cool and dark place avoiding direct sunlight.
- Do not store in a place that will heat up during summer time.
- Do not store with heavy loads or pressure on top. It may cause breakdown or deformation.



- In order to prevent the deformation of the hood, do not lay the stroller on its side or place items on it. Do not store in a place that will heat up.


About disposal

- Follow the instructions of relevant municipal authority to dispose.
- Do not dispose it in a place other than that instructed, in order to protect the environment.

About after-sales service

◎ About After-Sale Service

- When the product malfunctions in use, a problem is found during check-up, replacement of parts or repair is required, fixed part is loosened or squeaking, missing parts or wheel rotation is abnormal, or user finds any other abnormal condition, stop using the product and check the product name, item number and lot number (See the diagram below), and contact our customer support center.
- To ensure smooth proceedings, make sure to provide the product name, **item number and lot number displayed** at the backside of the handle.

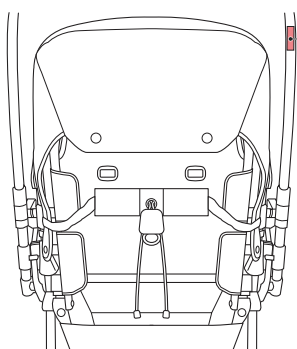

Label for product name,
item number and lot number

Customer Enquiry

Thailand

Baby Gift (Thailand) Co. Ltd

21/3 Krungthonburi Road, Klongtonsai, Klongsarn, Bangkok 10600, Thailand

Tel: 668 6302 9995

Singapore

Aprisin Singapore Pte Ltd

50 Tagore Lane, #B1-01 Entrepreneur Centre, Singapore 787494

Tel: 65 6336 8311

Malaysia

Kinderdijk Sdn Bhd

No. 11, Jalan Persiaran KIP 1, Taman Perindustrian KIP, 52200 Kuala Lumpur

Tel: 603-6203 2336

Vietnam

SnB Kidden World Company Limited

No.3, Slot 4D, Trung Yen 10A Street, Trung Hoa Precinct, Cau Giay Dist, Hanoi, Vietnam

Tel: 844 3933 5388

Philippines

Cannon Baby Safe Products Inc

LJS Corporate Building, 550 Magistrado Abad Santos St, Bacood sta Mesa, Manila 1016, Philippines

Tel: 632 713 9435

Indonesia

PT. Citrakreasi Makmur

Jln. Sosial No. 12, Kel. Wijaya Kusuma, Kec. Grogol Petamburan, Jakarta Barat 11460

Tel: 622-1566 4790

Cambodia

BMG Corporation Co., LTD

Aprica-Graco Flagship Showroom, 116C Sihanouk Blvd (St. 274), Sangkat Boeung Keng Kang 1,

Khan Chamkamon, Phnom Penh, Cambodia

Tel: 855-12 875 222 / 855-23 228 222

Aprica Children's Products Inc.

1-13-13 Shimanouchi, Chuo-ku, Osaka-shi, Japan 542-0082