

Please read this before using the stroller.



Aprica:Viit (B type stroller)

Aprica Viit取り扱い説明書引用

Viit(B type stroller) Each Name

Features of the parts

Handle: fixed on the rear side
Bag capacity: 5 kg
Seat belt: uses a magnetic buckle
※This product is not compatible with the installation of child seats.

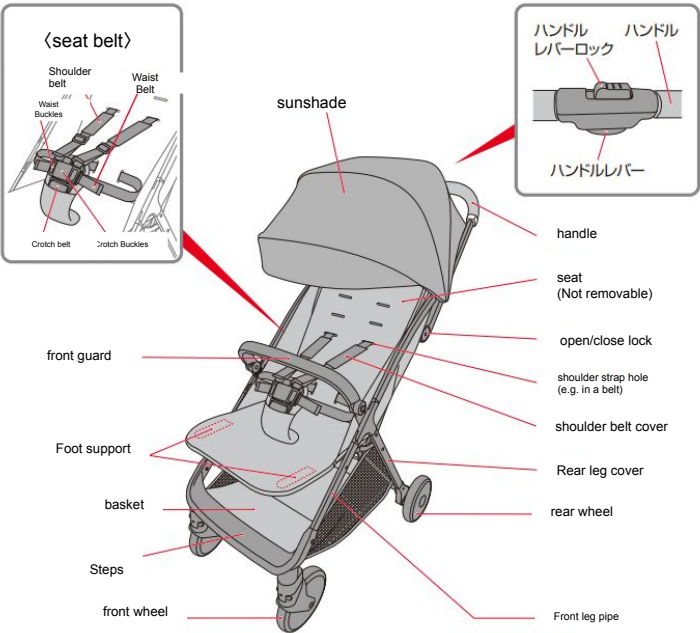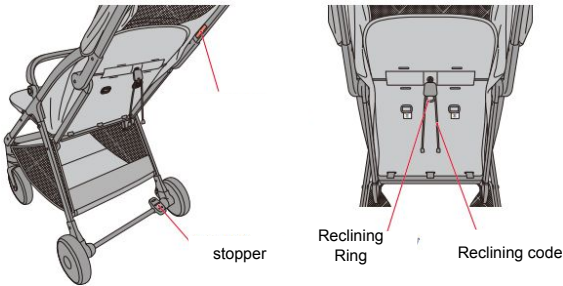


range of use	7 months to 48 months of age (up to approx. 22 kg of weight)
Conformance Criteria	SG Standard B type
Preferred Continuous Use Time	Seated posture: 1 hour or less

Opening


- Do not operate the stroller when children are in contact with or near it. A child may get his/her arms or legs caught in the moving parts, or the stroller may hit the body, resulting in injury.
- Do not allow children to operate the stroller. Failure to do so may cause the stroller to fall over or result in an unexpected accident or injury.

1 Before opening

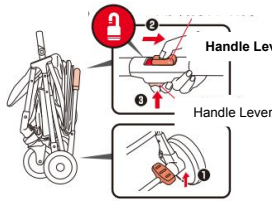


- ① Unlock the stopper.
- ② While sliding the handle lever lock in the direction of the arrow, grasp the handle lever tightly.

3 Locking the vehicle body

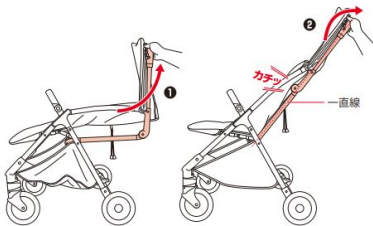


- ① Lift the handle as it is,
- ② Pull up the handle further until you hear a sound and the handle locks into place.

2 Open

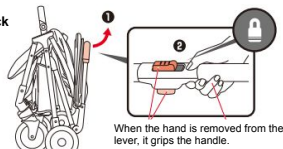


- ① Gently lift the handlebars as they are and slightly open the body of the vehicle.
- ② Remove your hand from the handlebar lever and handlebar lever lock, shift your hand to the side of the lever, and grasp the handlebar. When you release your hand from the lever, the handlebar lever lock will automatically slide back.


If the handle does not lock properly

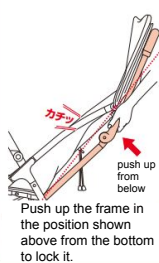


4 Confirmation of lock

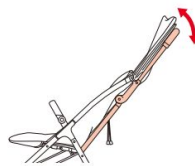


Move the handle up and down two or three times to make sure the stroller is not folded over (fully open).

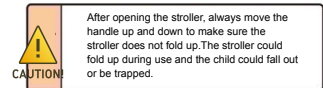


While the stroller is in use

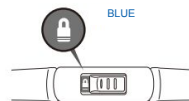

Do not hold the handle lever and handle lever lock while the stroller is in use. Always use the stroller with the blue color displayed.

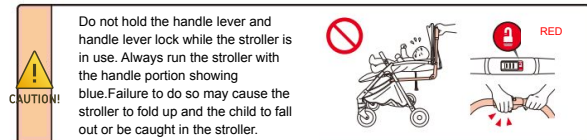

Note on opening and closing locks

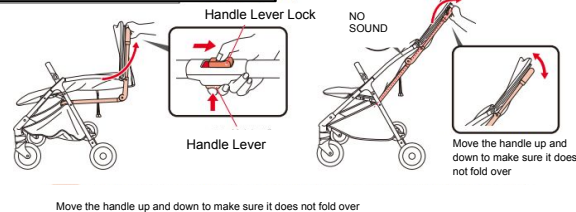


How to Fold

- ※ Open/close operation should not be performed while the child is conscious or even walking. The moving parts may pinch the child's fingers or limbs, or the stroller may hit an object, resulting in injury.
- ※ There is a risk of injury if a child gets his/her fingers or hands caught in the moving parts, or if the stroller hits an object.
- Do not allow children to operate the stroller. There is a possibility that the stroller may fall over or cause an unexpected accident or injury.

- ※ Fold the stroller after fastening the seat belt buckle. There is a risk of the seatbelt getting caught in the opening/closing lock, preventing the stroller from folding, damaging the buckle, or causing foreign objects to adhere to the magnetic part of the buckle.

1 Before folding

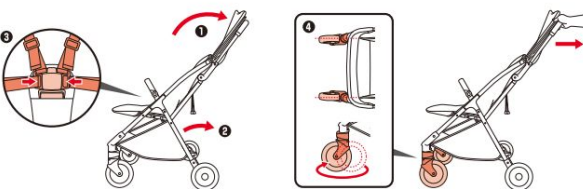


- (1) Close the sunshade.
- (2) Remove the luggage from the basket.
- (3) Fasten the seatbelt buckle.

- (4) Pull the vehicle straight back so that the front wheels face outward.

If the front wheels do not open inward, the body may tip over after folding.


2 Unlocking and folding

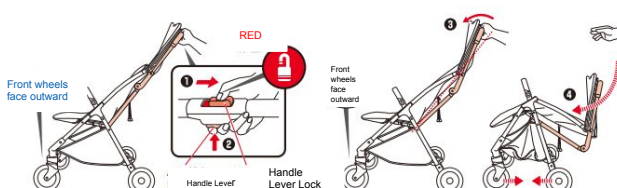

- (1) After sliding the handle lever lock in the direction of the arrow, (red color is displayed.)
- (2) Grip the handle lever tightly.


- (3) While holding the handle, gently tilt the handle forward. The lock will be released.
- (4) Release your hand from the handle. The main unit folds up naturally.

3 Check folding locks and locks

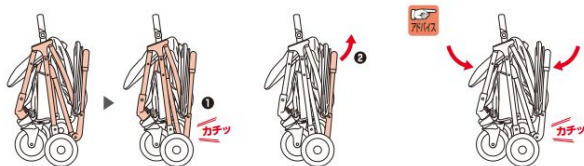


- (1) When folded to the end, it is locked with an audible sound.
- (2) Lift the handle lightly to make sure that the body is not opened.

If the body opens, push it in the direction of the arrow to lock it.

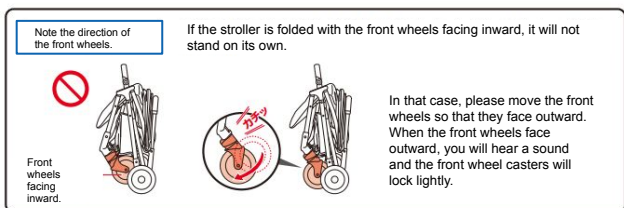

After folding.

When carrying the stroller after folding, hold either the front guard or the rear leg pipes.

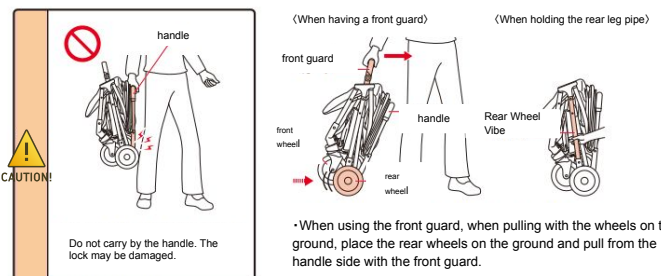

• When using the front guard, when pulling with the wheels on the ground, place the rear wheels on the ground and pull from the handle side with the front guard.

• Do not pull with the front wheels on the ground. Do not pull with the front wheels on the ground.

Various Usage

How to use the stopper

CAUTION!

- Always lock the stopper when loading or unloading a child.
- Do not over-tighten the stoppers when carrying a child. Due to the condition of the road surface, the function of the structure, and the durability, it is not possible to make the stopper absolutely immobile.
- Never leave the stroller with a child in it, even if the stopper is locked.

CAUTION!

Lock the stopper when leaving the stroller, even if you are not carrying your child.


By operating the stopper, you can lock/unlock both the left and right rear wheels.

<To lock the stopper>



① Lower the stopper and lock it.
② Move the stroller back and forth to confirm that the stopper is engaged.

<To unlock the stopper>

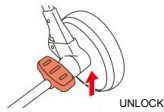

Raise the wheel stopper to unlock.

How to use the front guard


CAUTION!

- When operating the front guard, be careful not to pinch the child's fingers or limbs.
- Do not lift or pull the stroller with the child in it by the front guard.
- After installing the front guard, pull it and make sure it is locked on both sides.
- Always fasten the seat belt when carrying a child with or without the front guard.

This product can be used with the front guard removed from the main unit.


How to Attach

Check the direction of the logo on the front guard up and down, and insert both ends of the front guard securely.

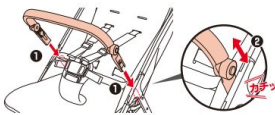

① Check the direction of the logo on the front guard up and down, and insert both ends of the front guard securely. Insert the front guard toward the insertion points on both ends until it 'clicks' into place. (left and right).
② Please be careful not to pinch the seat fabric.
③ Pull 2-3 times to confirm that it is securely installed.


How to remove

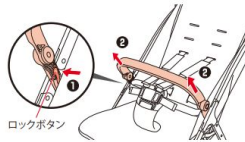

① While pressing the lock button on the inside of the front guard, (left and right)
② pull the front guard upward.

<Angle adjustment of front guard

The angle of the front guard can be adjusted to suit your preference. (2 levels)

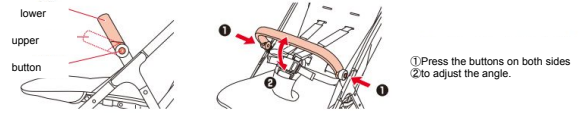

CAUTION!

- Do not use the front guard further down than the lower level or place children on top of the front guard. Failure to do so may result in an unexpected accident.
- Do not allow children to operate the buttons. There is a risk that the angle may suddenly change, causing the child to bump into you.


How to use the foot support

Supports the child in a comfortable position. The foot support can be adjusted to two positions: horizontal or downward.




※ It cannot be used in the upward position.

How to lower

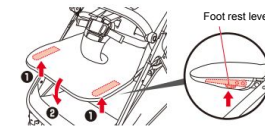

① While pinching the foot rest lever inside the seat (left and right)
② lower the foot rest support.

How to raise

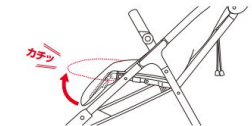

Raise the foot support until it clicks into place. (It will not be fixed when the seat is facing down.)

CAUTION!

- Do not use the foot support raised upward. Doing so may cause an unexpected accident.
- Do not remove the cover of the foot support at the end of the seat. The movable part of the foot support may become exposed and pinch the child's fingers or hands or the user's arms or legs.


Shoulder and seat belt adjustment

Shoulder belt height adjustment

CAUTION!

Adjust the height of the shoulder belt as your child grows.

<Shoulder belt position>

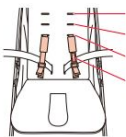

<Shoulder belt guideline>

Thread it through the lower section below the crotch position.




Adjust the shoulder belt position to the following three positions.


Approximate age in months
24-48 months Upper row
12-24 months Middle row
7-12 months Lower row

How to adjust the height of the shoulder belt

Release the seat belt buckle and keep the shoulder and waist belts separated.

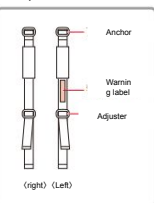


Check Point

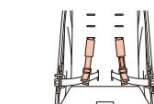


• Left and right shoulder belts are at the same height.
• Warning label is on the outside.
• Shoulder belt should not be twisted.

<back of stroller>

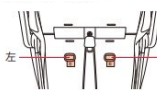

The shoulder belt labeled "Left" passes through on the left side and "Right" on the right side when viewed from the rear.

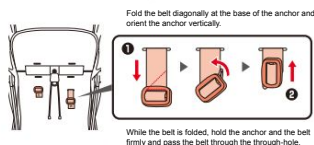

While the belt is folded, hold the anchor and the belt firmly and pass the belt through the through-hole.

(1) Fold the belt so that the anchor of the shoulder belt is facing the through hole as shown in the figure.
(2) Pass the anchor through the through hole as it is and pull out the anchor from the opposite side of the hole.

(3) Pass the anchor through the through hole at the height you want to use, and pull it out from the back.
(4) Pull the shoulder belt 2-3 times to make sure it does not come off.

How to use seat belts

About the buckles


CAUTION!

- The magnets on the buckle may affect pacemakers. Do not place a child with a pacemaker on this product.
- If a person with a pacemaker is operating the stroller, please keep the implanted part of the pacemaker away from the buckle.

CAUTION!

- Keep the stroller away from credit cards and other items that may be affected by magnets or that have magnets.
- Do not fold the stroller or leave the stroller unattended with the seatbelt unattached. The buckle may be damaged or foreign objects may adhere to the magnetic part of the buckle, preventing it from locking securely.


How to Unfasten Seat Belts

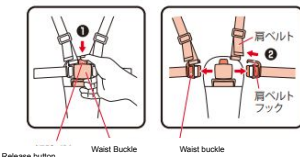

① Press the release button on the crotch buckle and release the waist buckle. (Both left and right hip buckles come off at the same time.)
② Pull out the shoulder belt from the shoulder belt hook. (Left and right)

The release button on the waist buckle is set to a strength that prevents children from easily operating it. Push the release button all the way in when unbuckling the seat belt.
It is not necessary to unbuckle the shoulder belt from the shoulder belt hook when loading/unloading the child.


Fastening the seat belt (buckle)

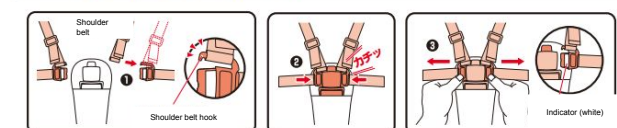

(1) Insert the shoulder belt into the shoulder belt hook. (left and right)
(2) Thread the shoulder belt completely through to the back of the shoulder belt hook.
(3) Insert the waist buckle into the crotch buckle. (Right and left) The waist buckle is pulled in by the magnet and locks with a "click" sound.
When the indicator (white) is visible

CAUTION!



- If the indicator (white) is visible, the buckle is not completely locked. Check to make sure that there is no belt or cloth caught in the buckle or foreign matter attached to the buckle and reinsert it.
- Be careful not to trap the end of the shoulder belt between the shoulder belt hook and the crotch buckle.

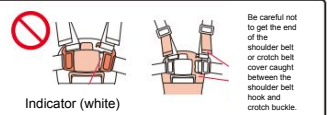

Reclining adjustment

When folding down the backrest

- Loosen the shoulder belt.

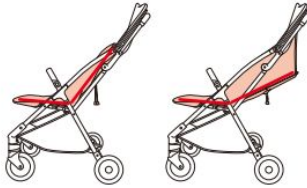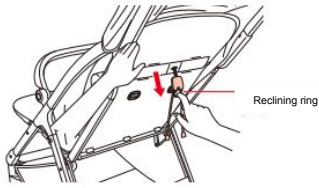


(1) Support the child with one hand and pull the reclining ring.

(2) While pulling the reclining ring, fold the backrest down and adjust the angle.

- After adjusting the reclining angle, adjust the length of the shoulder belt, waist belt, and crotch belt.

<When the child's head comes above the upper end of the backrest>

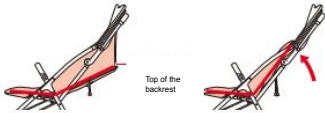


- Please use the recliner with the child in an upright position so that the child will not be in an unreasonable posture.

When raising the backrest



- With the child's weight off the backrest, pull the reclining cord to the left or right.
- Do not pull the reclining cord on one side at a time.

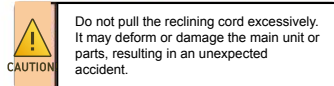


The child cannot be raised with his/her weight on the backrest.


How to load your child

How to load your child

1 Preparation

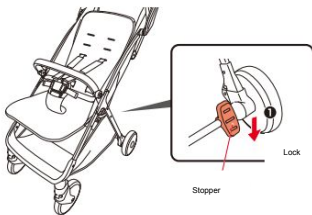


① Lock the stoppers.

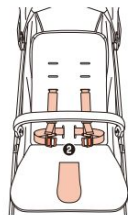

② Press the release button on the crotch buckle and release the waist buckle.

Press the release button on the crotch buckle and release the waist buckle.

2 Setting your child on board

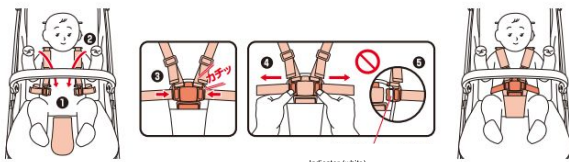

- ① Place the child on the crotch of the child in line with the crotch belt.
- ② Slide the child's shoulders through the shoulder belt.
- ③ Fasten the buckle.
- ④ Pull the left and right hip buckles to make sure they do not come off.
- ⑤ Make sure that the indicator (white) on the crotch buckle is not visible.

CAUTION!


- After fastening the seat belt, pull the left and right hip buckles to make sure they do not come off. If it is not tightened properly, it may come off during use and the child may fall.
- The shoulder belt must always be inserted into the shoulder belt hook. There is a risk of the shoulder strap wrapping around the child's neck and causing suffocation.
- When fastening the buckle, be careful not to pinch the child's arms, legs or clothing.
- Keep an eye on the child even when the seat belt is fastened. There is a risk that the child may stand up and fall out of the seat, or an unexpected action may cause an accident.
- The child should be placed with his or her crotch in line with the crotch belt. Leaning too far to the head side may cause the stroller to tip backwards.

CAUTION! Do not allow your child to get in and out of the stroller alone. If the child gets in and out of the stroller by himself/herself, a parent or guardian must support the stroller. Failure to do so may cause the stroller to tip over.

3 Belt Adjustment

Waist belt

<To tighten>

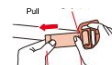

Leave at least 3cm of the belt out.

<To loosen>



Leave at least 3cm of the belt out.

Shoulder belt

<To tighten>




Pull the belt in the direction of the arrow with the adjuster to adjust the length.

<To loosen>




Crotch belt

<To tighten>

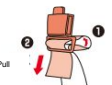

<To loosen>

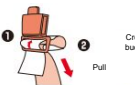


Crotch belt cover



- ① Feed the belt in the direction of the arrow
- ② Pull the belt and adjust the length.
- ③ After adjusting the belt, fasten the hook on the back of the crotch buckle to the crotch belt cover.

Belt adjustment guidelines

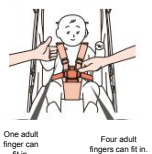

CAUTION!

- The shoulder belt, waist belt and crotch belt must be adjusted to the child's body.
- If the shoulder belt, waist belt, or crotch belt is loose, there is a risk of the child standing up and falling even if it is tightened.
- The end of the waist belt must have at least 3cm of the belt exposed. The belt must be at least 3 cm long for 2 cm to 3 cm of the belt body to be exposed.
- Whenever the reclining angle is adjusted, adjust the length of the shoulder belt, waist belt, and crotch belt.

4 Finally



- Unlock the stopper.